

AGSR

Mechanical seals | Agitator seals | Gas-lubricated seals



Features

- For top and side entry drives
- Double seal
- Balanced
- Stationary springs on product side
- Independent of direction of rotation
- Gas-lubricated
- Cartridge unit

Advantages

- Ready-to-fit and factory-tested unit
- Rotating seat at product side
- Torque transmission by clamping ring for large axial movements
- Non-contacting operation
- No friction on the seal faces, no heat generated at the seal or in the medium
- Sterile design available
- ATEX certification on request

Operating range

Shaft diameter:

$d_1 = 20 \dots 200 \text{ mm}$ (0.8" ... 7.9")

Pressure:

$p_1 = \text{Vakuum} \dots 6 \text{ bar}$ (87 PSI),

$\Delta p = \text{min. } 3 \text{ bar}$ (44 PSI),

$p_3 = \text{max. } 9 \text{ bar}$ (131 PSI)

Temperature:

$t_1 = -20^\circ\text{C} \dots +200^\circ\text{C}$

(-4 °F ... +392 °F)

Sliding velocity: $v_g = 0 \dots 5 \text{ m/s}$ (0 ... 16 ft/s)*

* Higher velocities on request

! It should be noted that the extremal values of each operating parameter cannot be applied at the same time because of their interaction.

Materials

Seal faces and seats: Silicon carbide, FDA conform

Secondary seals and metallic parts acc. to application and customers' requirement.

Standards and approvals

- FDA
- ATEX
- Compliant to TA Luft (German Clean Air Act)

Notes

Options:

- Flush

Recommended applications

- Chemical industry
- Food and beverage industry
- Pharmaceutical industry
- Mixers
- Dryers
- Special rotating equipment


Recommended piping plans

Gas supply by EagleBurgmann
GSS4015/A400-D0,
GSS4016/A250-D1 or GSS4016/A350-D1.

Note: To assure a sufficient supply of the mechanical seal, pressure at entry of the supply system must be min. 3 bar (44 PSI) above max. barrier pressure always.

Product link:
[EagleBurgmann GSS](#)

RELY ON EXCELLENCE

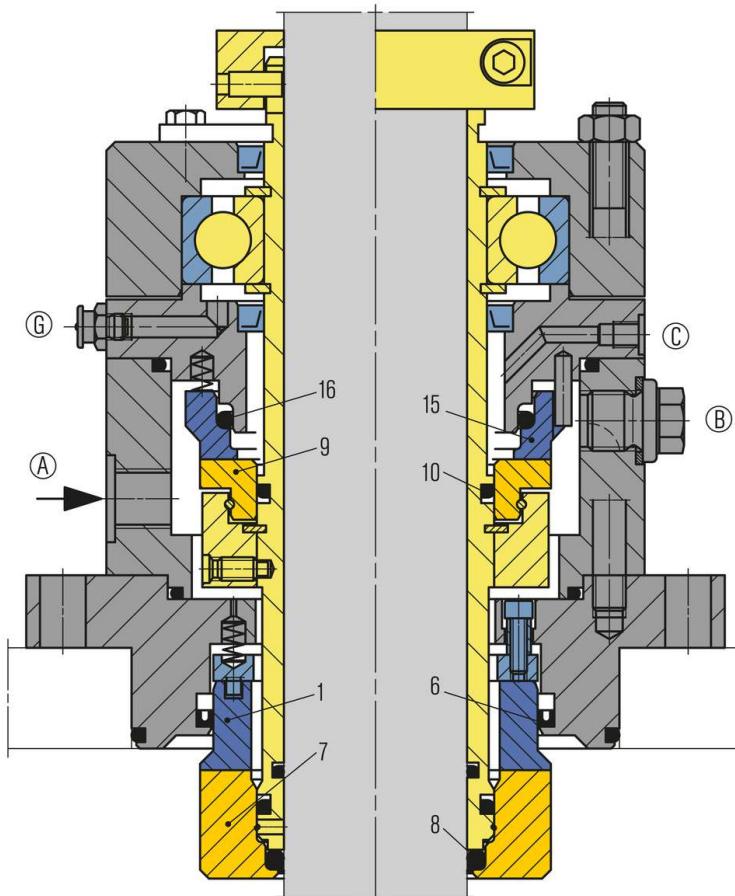

AGSR3(L)-D

Double seal (with floating bearing for the shaft) for sterile applications. The specific design free of dead spaces with polished surfaces on the product side meets the requirements for hygienic applications.


Item Description

- 1, 15 Seal face
- 6 Sealing ring
- 7, 9 Seat
- 8, 10, 16 O-Ring


RELY ON EXCELLENCE

Torque transmissions


Shrink disk

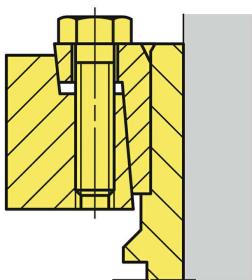

Clamping ring with pin

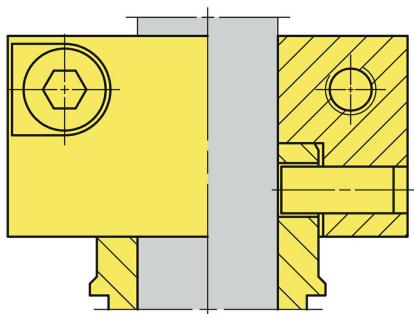


Clamping ring

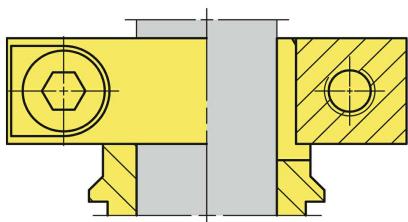

RELY ON EXCELLENCE

Installation, details, options

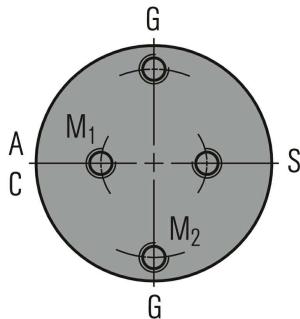


Supply connections

A Barrier gas IN
C Leakage
G Grease
S Flush

Option

Flushing the AGSR: Especially when the seal is operated in side or bottom entry drives, an optional flush on the product side enhances operational reliability.

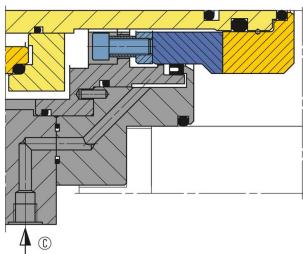

RELY ON EXCELLENCE

Product variants

AGSR5(L)-D

Double seal (with floating bearing for the shaft). If the seal has to run in the product, please inquire.



AGSR5(L)-D

Double seal (with floating bearing for the shaft).

